

Installation Ouick Start Guide for WSA-1

Important Installation Instructions

REMOVE

Locate your existing filter. Remove the old filter from the filter mount by turning it counterclockwise as shown in the picture.



PREPARE

Remove sanitary cap from new filter. Be careful not to remove the o-ring located under the plug. IF THE O-RING IS MISSING, PLEASE CALL (866) 218-8473 FOR HELP.



Check that the o-ring is seated evenly on top of the filter. The o-ring is required for a proper seal to the filter mount.



Your new filter is designed slightly different from the original filter it replaces. It has a notch on the top edge (see picture) and the o-ring inside the top. When the filter is placed in the filter mount it may require more effort to turn the filter because of the o-ring.



INSTALL

Place the top of the new filter into the refrigerator filter mount. Be sure that the START arrow on the filter label is aligned with arrow on the filter mount.



Twist the filter clockwise until the STOP arrow on the label is aligned with the arrow on the mount. The arrows must be aligned to activate the water valve located inside the filter mount. IF THE VALVE IS NOT FULLY ACTIVATED THE WATER FLOW WILL BE SLOWER THAN NORMAL. In some instances the partially activated valve may cause a "chattering" noise in the water line.



7. Check the water flow by filling a glass from the refrigerator water dispenser. If the water flow is slow or there is "chattering", remove and reinstall the filter making sure it is seated securely and the arrows are aligned. Check again, PLEASE CALL (866) 218-8473 IF YOU NEED ASSISTANCE.



Note: Initial flow rate may be slower than expected. Full flow rate should be restored within 24-36 hours.

FLUSH

- 8. Run water from the dispenser for 5 minutes at .5 gpm (about 2½) gallons) to clear the system and prevent sputtering.
- 9. Check the filter for any leaks. Inspect the mount area and filter bottom for any sign of moisture.

COMPLETE

10. Reset the "replace filter" light, if needed, by holding the reset button for three seconds.

Reset Water Filter

11. Replace filter every six months for best results.

Specifications

Flow Rate:	.5 gpm (1.89 lpm)
Operating Temperature:	33°-100°F (0.6°-38°C)
Operating Pressure:	30-100 psi (207-689 kPa)
Life:	6 Months or 300 gallons (1,136 liters)



9/2023 • REV 2307

This WSA-1 is Tested and Certified by NSF International against NSF/ANSI Standard 42 for the reduction of chlorine taste and odor



This WSA-1 is Tested and Certified by IAPMO R&T against NSF/ANSI Standards 42, 53 & 372, for the reduction of Chlorine taste and odor, Lead, Cvst. VOC's, Mercury, Asbestos. Refer to Performance Data Sheet for complete list of claims.

For further questions or assistance please call (866) 218-8473.

Warning: To reduce the risk of property damage from water leakage, the filter bypass plug MUST be used when a filter replacement cartridg is not installed. For cold water applications only. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Protect from freezing, REPLACE FILTER EVERY 6 MONTHS, OR IF BAD TASTE OR 000R OCCUR.

Systems Certified for cyst reduction may be used on disinfected waters that may contain filterable cysts. Installation shall comply with applicable state and local regulations. The risk associated with small parts can cause choking if swallowed. Keep children away from small parts during the replacement of the water filter.

Aguamor, LLC, 42188 Rio Nedo, Temecula, CA

www.watersentinelfilters.com